



Technical Bulletin

Service Instructions for Heavy Vehicle Components That Are Submerged in Contaminated Flood Water as a Result of the Recent Hurricanes

Important Information

Heavy vehicle components that are submerged in contaminated flood water as a result of the recent hurricanes may have sustained damage that includes, but is not limited to, rust and corrosion.

To help prevent possible product issues from occurring in the future, ArvinMeritor advises that you perform the following service procedures before you return a vehicle with submerged components to service. None of the following actions are warrantable.

WARNING

The U.S. Environmental Protection Agency (EPA) and the U.S. Department of Health and Human Services (HHS) are cautioning the public about the potential hazards associated with flood waters, due to elevated levels of contamination and other hazardous substances. For the complete EPA guidelines concerning flood water safety issues, visit the EPA website at www.epa.gov.

Before You Service a Component

Call ArvinMeritor's Customer Service Center at 800-535-5560 to obtain the correct service publication. You can also access publications in the Tech Library on ArvinMeritor's website at www.arvinmeritor.com.

Recommended Service Procedures for Components Submerged in Contaminated Flood Water

Hazard Alert Messages

Read and observe all Warning and Caution hazard alert messages contained in the publication for the component you will service before you perform procedures to prevent serious personal injury and damage to components.

Inspect Components

Axles

Rear Drive and Front Drive Steer

1. Remove and completely disassemble the carrier assembly. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
2. Clean the housings to ensure that you remove all water and contaminants.
3. Replace all seals. Do not reuse seals.
4. Replace the breather assembly.

Front Non-Drive Steer

1. Remove and completely disassemble the wheel end and steering knuckle assembly.
2. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
3. Replace all seals.

Tie Rods

Remove and replace the tie rod ends. Inspection is not possible.

Trailer Axles

1. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
2. Remove the spindle end plugs. Drain any water that may have entered the axle tube cavity.
3. Blow air through the inside of the tube to clean and dry the tube cavity.
4. Replace the spindle end plugs.

Conventional (Non-Unitized) Hubs on Rear Drive, Front Drive Steer, Front Non-Drive Steer, and Trailer Axles

Oil or Grease Lubricated; Conventional Bearings

1. Remove the hub from the spindle. Completely disassemble the hub assembly.
2. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
3. Clean the hubs to ensure that you have removed all water and contaminants.
4. Replace all seals. Do not reuse seals.

Unitized Hubs on Front Non-Drive Steer and Trailer Axles

Sealed; Not-Adjustable

1. Replace the hub unit as an assembly. Inspection is not possible.
2. Clean and inspect the spindles for water and contaminant damage that includes, but is not limited to, rust or corrosion before you install the new hub assembly. Replace damaged spindles.

Drivelines

RPL Permalube™ Series Permanently-Lubricated; Greaseable Universal Joints and Slip Yokes

1. Replace all universal joints and center bearings. Inspection is not possible.
2. Completely disassemble and inspect the slip assembly. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion.
3. Replace all damaged components.

Transmissions

Meritor 9-, 10- and 13-Speed Manual Transmissions

1. Remove and completely disassemble the transmission assembly.
2. Clean the housing to ensure that you have removed all water and contaminants.
3. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
4. Replace all seals. Do not reuse seals.
5. Replace the breather assembly.

ZF-FreedomLine Automated Transmission

1. Remove and replace the transmission electronic controller (ZMTEC) and the voltage doubler.
2. Inspect the wiring harness for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace the wiring harness if you find corrosion.

Mechanical Systems

Remove the transmission and return it to an authorized ZF service center for disassembly and inspection. Contact ArvinMeritor's OnTrac warranty team at 866-668-7221 for information.

Transfer Cases

1. Remove and completely disassemble the transfer case assembly.
2. Clean the housing to ensure that you have removed all water and contaminants.
3. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
4. Replace the breather assembly.
5. Replace all seals. Do not reuse seals.

Clutches

ZF-FreedomLine Integral Clutch; Meritor 14-Inch and 15.5-Inch Diaphragm Spring Clutches

1. Replace the clutch, clutch cover, pilot bearing and clutch brake.
2. Inspect the transmission front bearing retainer, cross shaft bushings and engine flywheel for water and contaminant damage that includes, but is not limited to, rust and corrosion. Refer to the engine manufacturer's procedures to inspect the flywheel.

Air-Actuated Cam, Disc and Wedge Brakes (All Models)

1. Completely disassemble the brake assembly. You don't have to remove the brake spider or torque plate. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
2. Clean all components and housings to ensure that you remove all contaminants. Ensure that all sliding surfaces, such as caliper slide pins, camshafts, etc., are free of rust and contaminants.

3. Replace all shoes and linings (pads).
4. Replace the seals. Do not reuse seals.
5. Lubricate the brake assembly completely to purge all residual contaminants.
6. Contact the brake chamber manufacturer for instructions to verify what should be inspected or replaced before returning the vehicle to service.

Automatic Slack Adjuster

1. Replace the complete slack adjuster assembly.
2. Clean and lubricate the clevis pin.

Hydraulic-Actuated Drum and Disc Brakes

1. Completely disassemble the brake assembly. You don't have to remove the torque plate or brake spider. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged components.
2. Clean all components and housings to ensure that you remove all contaminants. Ensure that all sliding surfaces, such as caliper slide pins, camshafts, etc., are free of rust and contaminants.
3. Replace all shoes and linings (pads).
4. Replace all seals. Do not reuse seals.

Brake Drums and Rotors

1. Remove and inspect the brake drums and rotors for water and contaminant damage that includes, but is not limited to, rust and corrosion.
 - **If you find rust:** Remove it with a light emery cloth.
2. Thoroughly clean all surfaces, including all debris on the rotor cooling vanes.
3. Clean and remove all rust from all ABS tooth wheel surfaces, as well as the air gaps between the teeth.

Shock Absorbers

Replace all shock absorbers.

RideStar™ RHP Series Trailer Air Suspension Systems

1. Remove and replace the suspension pivot bushings.
2. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion.

3. Clean the components before installing new bushings.
4. Replace all rubber parts. Replace all air springs.

Slider Pin Mechanism

1. Pull and release the slider pull handle several times.
2. Check to ensure that all four locking pins retract and engage freely, and that no binding or excessive corrosion is present on the linkage system.
 - **If the system does not operate freely or excessive corrosion is present:** Clean and lubricate the linkage connection points. Continue to pull and release the locking system until all pins retract and engage freely.

RideStar™ RFS Series Trailer Air Suspension System

1. Remove and replace the suspension pivot bushings.
2. Inspect all components for water and contaminant damage that includes, but is not limited to, rust and corrosion.
3. Clean the components before installing new bushings.
4. Replace all air springs. Replace all rubber parts.

Height Control Valve

1. Remove and replace the height control valve.
2. Ensure the air system is clean and dry.
3. Set the ride height. Refer to the manufacturer's specifications.

Meritor Tire Inflation Systems (MTIS) by P.S.I.™

1. Disassemble air hoses from the control box to the axle. Ensure they are clean and dry.
2. Disassemble the tire stem hoses from the "T" in the hubcap. Inspect the "T" for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged "Ts".
3. Inspect the hubcaps for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged hubcaps.
4. Inspect all hoses for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged hoses.
5. Remove the hubs. Remove the stators from the axle plugs. Inspect the stators for water and contaminant damage that includes, but is not limited to, rust and corrosion. Replace all damaged stators. If the stators are not damaged, clean and dry them for possible reuse.

6. Remove the axle spindle end plugs. Drain all water that may have entered the axle tube cavity. Blow air through the inside of the tube to clean and dry the tube cavity.
7. Install new spindle plugs and install the stators.
8. Replace the MTIS control box and indicator light on the front of the trailer.
9. Ensure the system is operating correctly before returning the vehicle to service.

ArvinMeritor™

Meritor Heavy Vehicle Systems, LLC
2135 West Maple Road
Troy, MI 48084 USA
800-535-5560
arvinmeritor.com



Information contained in this publication was in effect at the time the publication was approved for printing and is subject to change without notice or liability. Meritor Heavy Vehicle Systems, LLC, reserves the right to revise the information presented or to discontinue the production of parts described at any time.

Copyright 2005
ArvinMeritor, Inc.
All Rights Reserved

Printed in USA

TP-0584
Issued 09-05
(16579/22882)